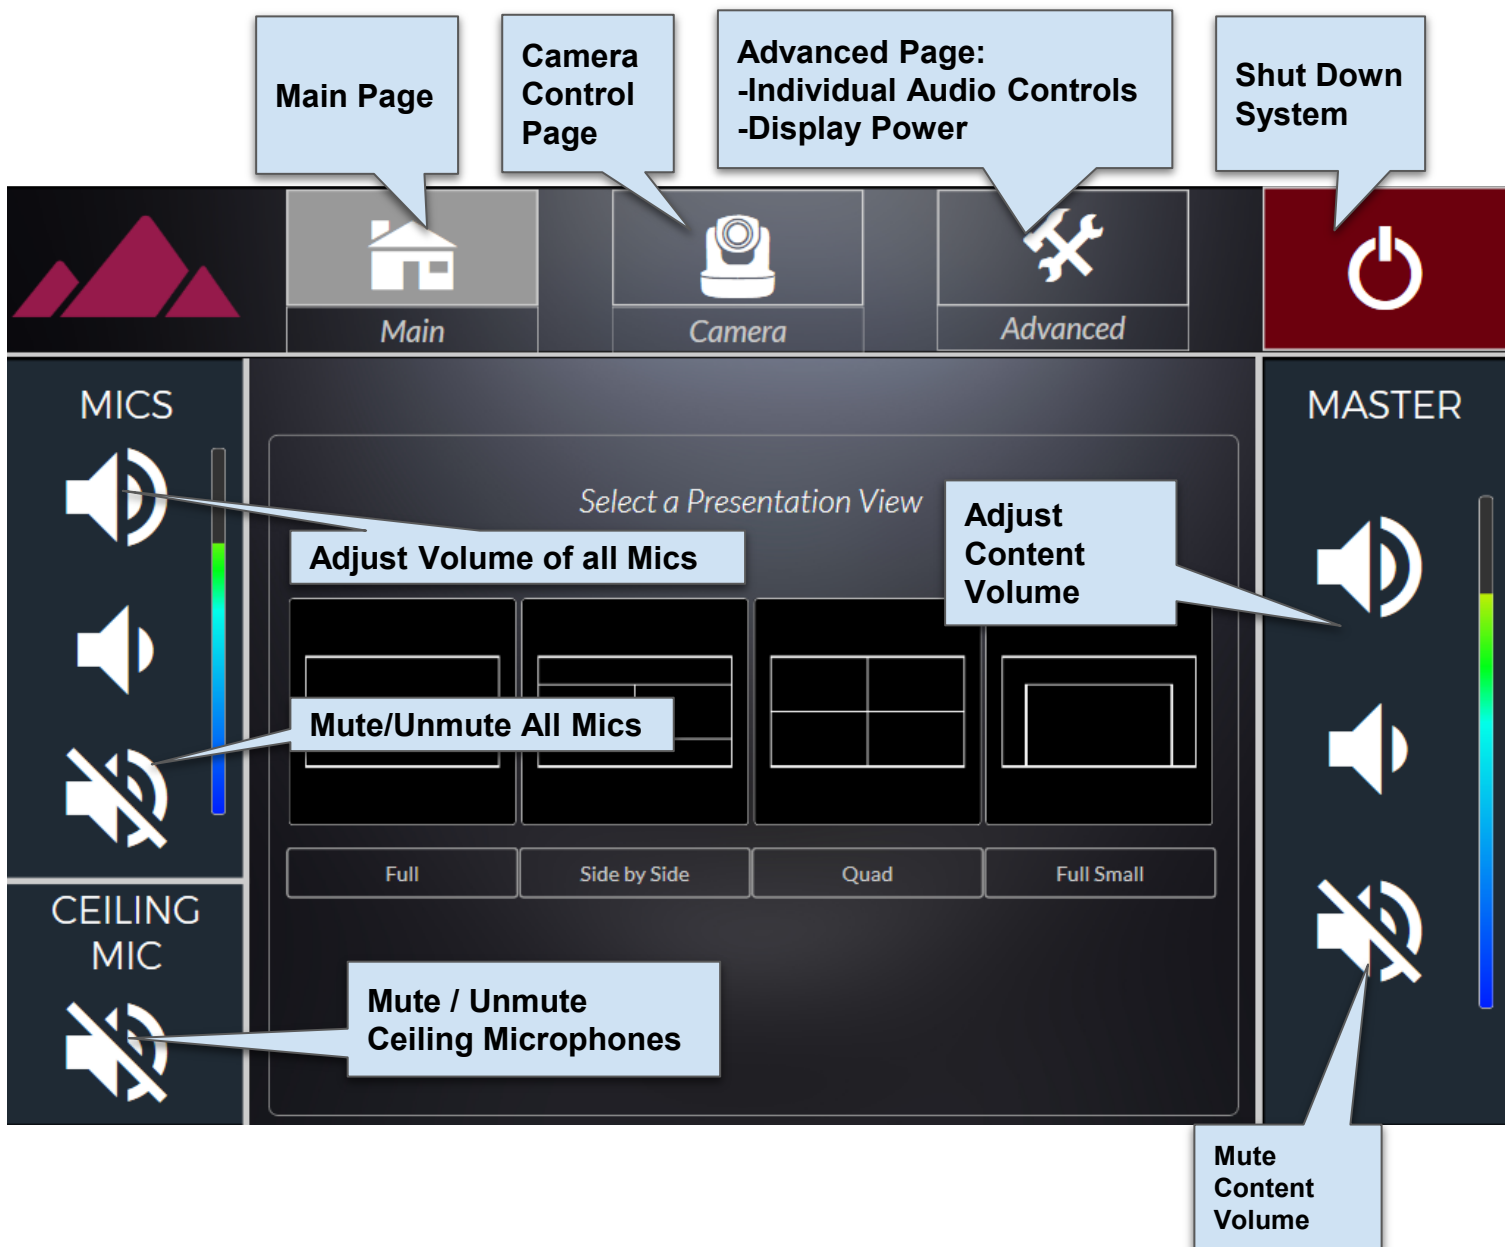# AV Operating Procedure Smyth 122
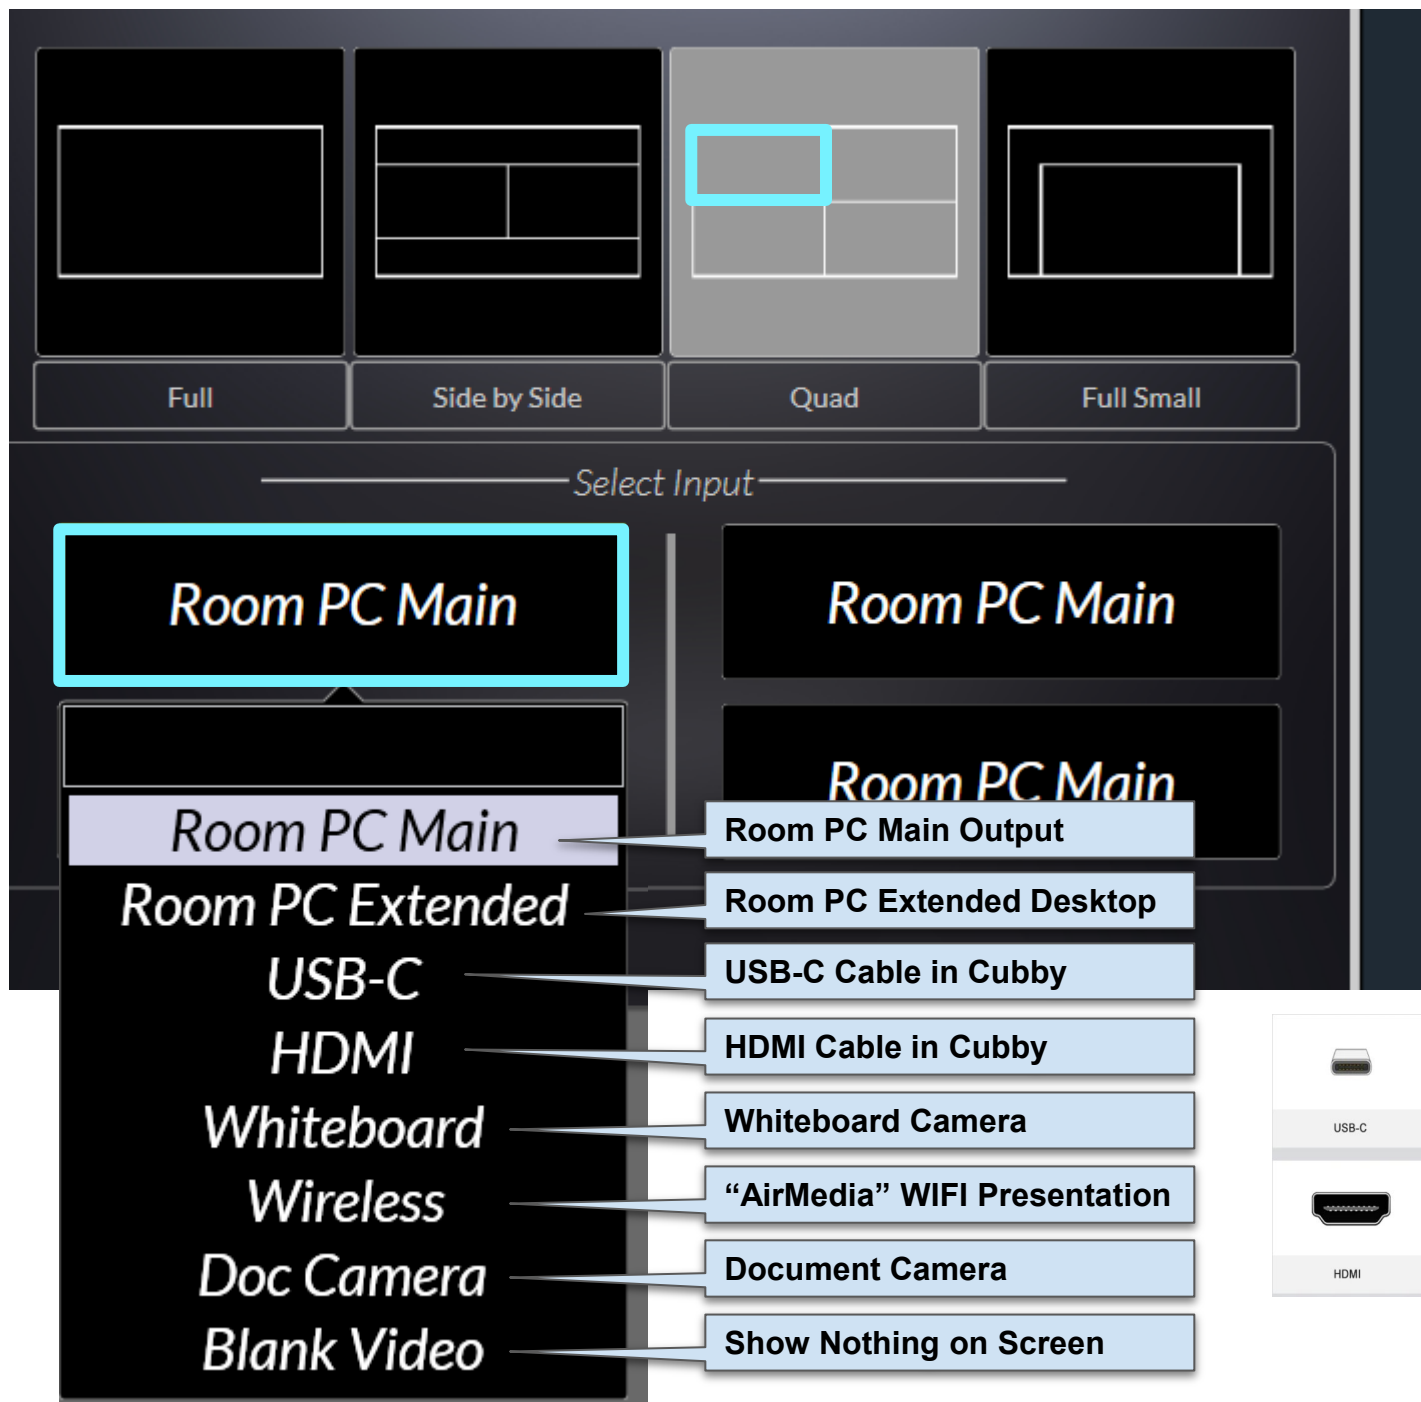
1.   Turn ON the System (Press to Start)

2.   If using your own laptop, connect from the cubby **EITHER:**
         <mark>Both HDMI & USB-A Cables</mark>
         <mark>Only the USB-C cable</mark>

3.   Select the appropriate speaker/microphone settings on your laptop and in Zoom.
     -Choose "Echo Canceling Speakerphone"

4.   Select a "Presentation View" from the "Main" page.

Once you select a "Presentation View", touch the corresponsing source locations to open up the menu to select the desired source.

*In this example of the "Quad" view, the top left source button will route the selected content to the top left window on the screen.

| Full | Side by Side | Quad | Full Small |

Select Input

Room PC Main

Room PC Main

Room PC Main

Menu item	Description
Room PC Main	Room PC Main Output
Room PC Extended	Room PC Extended Desktop
USB-C	USB-C Cable in Cubby
HDMI	HDMI Cable in Cubby
Whiteboard	Whiteboard Camera
Wireless	"AirMedia" WIFI Presentation
Doc Camera	Document Camera
Blank Video	Show Nothing on Screen

USB-C

HDMI

Camera Control

Control Camera movement

Zoom In or Out

MASTER

Zoom

ON

IN

Auto
Tracking

OFF

OUT

Turn Tracking Feature On / Off

Privacy

Preset 1   Preset 2   Preset 3   Preset 4

- Long press to create a camera location preset
- Short press to recall preset

Air Media Wireless Presentation

You will need to be connected to the wireless network to use this source.

Enter this IP Address into your web browser.
Download the client.
Enter the code when requested.

AVF 79253   June 30, 2020 | 3:38 PM

AVAILABLE FOR REST OF THE DAY

Present Using Wireless
Visit: http://192.168.1.3
Code: 7063

Present Using Cables
Connect using cables provided:

AirBoard
URL: airboard.crestron.com
Crestron id: XCFTV

CRESTRON

AV Operating Procedure Smyth 122

Advanced Audio

Individual Volume Controls

Handheld	Lapel Mic	Catchbox	USB	Video

Wireless Handheld

Wireless Lapel

Throwable Cube Mic

"Echo Canceling Speakerphone" when Selected from computer

Content from computer

Mute / Unmute

Meter

Battery Bars

Battery Bars

Advanced Display Power

Power ON / OFF independently of System

Projector

Rear Display

Rear Display View Video

Rear Display shows the SAME content as Main Screen

Rear Display View Camera

Rear Display shows the Rear Camera Feed

Blank Screens

Shows Nothing on Screens